

Drilling Machines

Genuine Hawle under pressure tapping tool.



TECHNICAL GUIDE: **APF11.6**

Applications

Under pressure tapping pipes of steel,
cast iron, AC or plastic

Drilling Machine for under pressure tapping

- When drilling under pressure, the swarf is washed out through a purpose - designed outlet (9)
- Drill bit is rotated by ratchet handle (1) and fed by feed wing nut (3)
- The ratchet is connected to the drill shaft with a simple locking device
- Pipe saddle adaptors and reducers are sealed with captivated rubber rings (8)
- Can be connected directly on to tapping saddle or isolation valve
- Total weight 17.5 kg
- Demo video available
- Hynds part number: TTUP

TABLE 1

Comes with the following drillbits and accessories

Twist drill for steel-, CI and AC pipes

Twist drill 1" - 24 Ø

Twist drill 1¼" - 29 Ø

Twist drill 1½" - 35 Ø

Twist drill 2" - 40 Ø

Cup drill for PVC pipes

Cup drill 1" - 24 Ø

Cup drill 1¼" - 29 Ø

Cup drill 1½" - 35 Ø

Cup drill 2" - 40 Ø

Reducing adaptor with rubber seals

2" - 1"

2" - 1¼"

2" - 1½"

2" - 2½"

Equal adaptor with rubber seals

2" - 2"

1 pc. Allen key size 5


2 pcs. C spanner for adaptor

Saddle blade for shut off

1" - 1¼"

1½" - 2"

Complete in case Weight: 17,5 kg

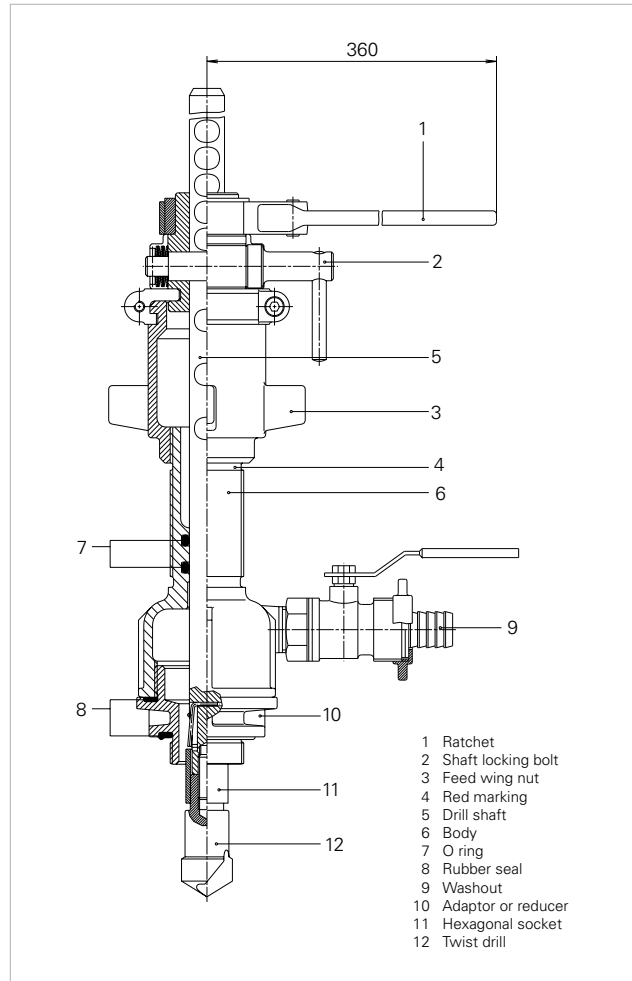

- 1 Ratchet
- 2 Shaft locking bolt
- 3 Feed wing nut
- 4 Red marking
- 5 Drill shaft
- 6 Body
- 7 O ring
- 8 Rubber seal
- 9 Washout
- 10 Adaptor or reducer
- 11 Hexagonal socket
- 12 Twist drill

FIG. 1



FIG. 2

Drilling Instruction

1. Secure appropriate tapping band to the pipe that is to be drilled, and (if required for under pressure tapping) attach a service valve to the tapping band. Ensure there will be enough clearance for a drill bit to pass through both tapping band and valve.
2. Choose the correct drill bit (1) and screw it onto the male threaded shaft. Push the Hex Sleeve (2) of the shaft over the hex of the drill bit.
3. Making sure the service valve is open for the drill to pass through, screw the Hawle drilling machine into the service valve or tapping band. Use one of the reducing bushes supplied (4) if necessary.
4. Reset (unwind) the advancing nut (5) until you see the red warning marks (6) on the thread.
5. Without turning the advancing nut, loosen stop bolt (7) and push the drill shaft (3) until the drill bit makes contact with the pipe. Line up the notches on the shaft with the stop bolt (7) by rotating the shaft and withdrawing slightly it to the nearest notch to locate it. Secure the shaft by turning the stop bolt.
6. If you are drilling under pressure, open the valve on the side of the tapping machine.
7. Begin drilling by using the advancing nut (5) and rotating the shaft (3) with the supplied ratchet handle (8). Note, only use moderate force on the advancing nut. If the torque required to use the ratchet becomes high, back off the advancing nut and continue.
8. After drilling, reset the advancing nut to the red warning mark. If you are drilling under pressure, carefully release the stop bolt and the pressure from the tapped connection will push the drill bit and shaft clear of the service valve / tapping band. If the shaft does not move, it may be that the pressure is too low and you may pull the shaft clear by hand. Caution – keep clear of the shaft (3) during this process to avoid injury.
9. Close the service (attached to the tapping band), and disconnect the Hawle drilling machine.

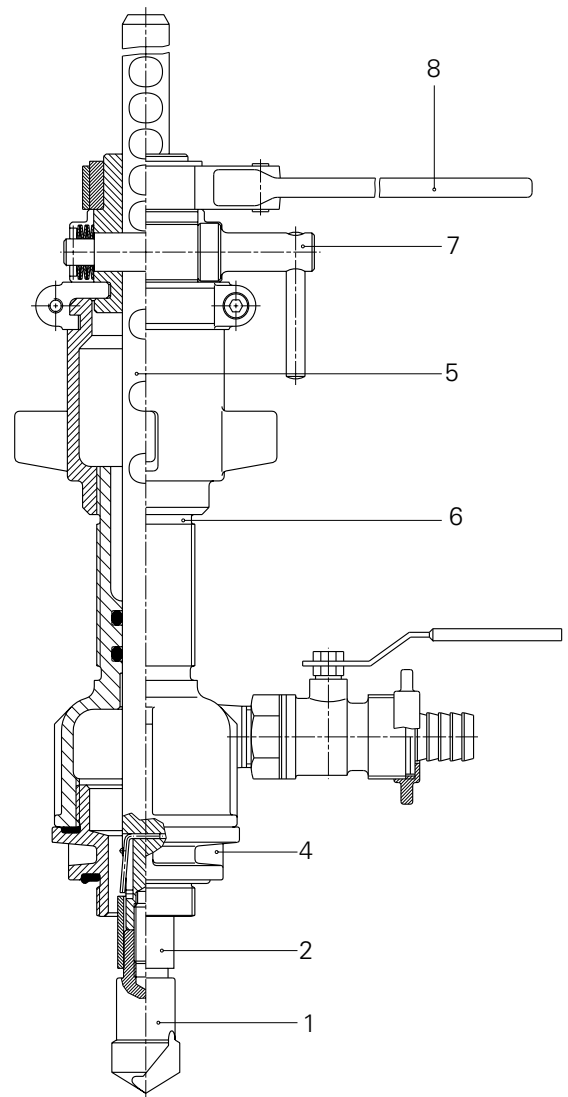


FIG. 4

 


FIG. 3 Cup drill for PVC pipes



Scan for more
information

Disclaimer: While every effort has been made to ensure that the information in this document is correct and accurate, users of Hygrade Water Infrastructure product or information within this document must make their own assessment of suitability for their particular application. Product dimensions are nominal only, and should be verified if critical to a particular installation. No warranty is either expressed, implied, or statutory made by Hygrade Water Infrastructure unless expressly stated in any sale and purchase agreement entered into between Hygrade Water Infrastructure and the user.

March 2024

+61 7 38059186
hygradewater.com.au

BRISBANE (Head Office) 42-44 Blue Eagle Drive, Meadowbrook, QLD 4131
SYDNEY 2/35 Prime Dr, Seven Hills NSW 2147, Australia
MELBOURNE 20A Frances Drive, Dandenong South 3175

HW **HYGRADE WATER**
INFRASTRUCTURE